

## TZ-220 Basic Questions

**Q:** My alarm goes off 10 minutes and 5 minutes before it is supposed to, why?

**A:** The Screaming Meanie 220 has two pre-alarms. One that goes off 10 minutes before it is set and another one that goes off 5 minutes before. If the alarm is going to wake you up the first time, we suggest you set it for 10 additional minutes.

**Q:** Is there a way to disable the pre-alarms?

**A:** No, there is not.

**Q:** How do I access the Timer feature on my Screaming Meanie 220?

**A:** To access the Timer feature, move the "Timer/Clock" switch to "Timer". Press the "Arrow" button once. The "Timer" feature is now activated. Set the number of hours and minutes you would like your Screaming Meanie 220 to go off in.

**Q:** How do I set the time?

**A:** Make sure the "Timer/Clock" switch is set to clock. Hold down the "Key" button and press the hour button, repeatedly, until you reach the desired hour. Hold down the "Key" button and press the minute button, repeatedly, until reach the desired minutes. The clock is not set.

**Q:** How do I set the alarm clock on my Screaming Meanie 220?

**A:** To set the alarm clock, move the "Timer/Clock" switch to "Timer" (the word Alarm should appear). Hold down the "Key" button and press the hour button, repeatedly, until you reach the desired hour. Hold down the "Key" button and press the minute button, repeatedly, until reach the desired minutes. Press the "Key" and "Arrow" button at the same time to activate the alarm (a bell will be displayed on the top left portion of the screen).

**Q:** How do I turn off my Screaming Meanie 220?

**A:** Press the "Key", hour, and minute buttons at the same time.

**Q:** What is the point of the beacon?

**A:** When the beacon is activated, by pushing the "Key" and "Lighthouse" buttons at the same time, it will sound for 10 seconds every 5 minutes until turned off. The TZ-220 when on the high setting is 120db and can be heard from up to one mile away. This feature is useful should you become stuck or lost in a secluded area.

**Q:** There is a little plug in hole on the side of my TZ-220, it looks like an adapter plug...is it?

**A:** No, it was for an accessory called the "Beekin Lite". We have discontinued that product and no longer produce the TZ-220 with a "plug in" on the side.

**Q:** What is the emergency alert for then?

**A:** When you press the "Key" button twice (within 1 second), the alarm will start sounding. The alarm will not pause or stop until you turn it off. This can be used as a panic feature.

**Q:** Can I get a replacement belt clip?

**A:** Yes, we can send you a new belt clip at no charge.

\* 1 year limited warranty does not cover abuse or misuse.